


IN-DASH INSTALLATION KIT FOR 1998-02 HONDA ACCORD VEHICLES

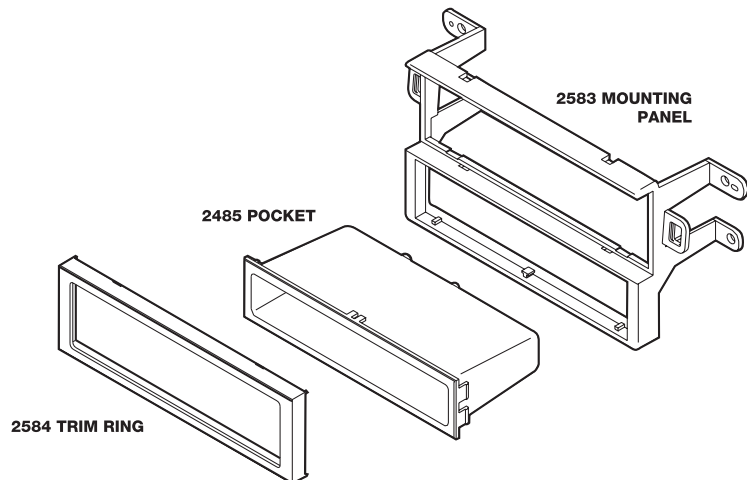


FACTORY WIRING CODES

- NOTES**
- All wire codes are viewed as looking at the front of the plug with the wires exiting the rear.
 - Use these wiring codes as a guide. Your vehicle might differ.

1998-02 HONDA ACCORD VEHICLES

POWER AND SPEAKER

- | | |
|---|--|
| 1. = White/Green = 12V Constant | 11. = Black = -12V Chassis Ground |
| 2. = Red/Black = +12V Illumination | 12. = Red = +12V Variable Dimmer |
| 3. = Blue/Green = Left Front Positive (LF+) | 13. = Gray/Black = Left Front Negative (LF-) |
| 4. = Red/Green = Right Front Positive (RF+) | 14. = Brown/Black = Right Front Negative (RF-) |
| 5. = Blue/Yellow = Left Rear Positive (LR+) | 15. = Gray/White = Left Rear Negative (LR-) |
| 6. = Red/Yellow = Right Rear Positive (RR+) | 16. = Brown/White = Right Rear Negative (RR-) |
| 7. = Not used | 17. = Not Used |
| 8. = Empty | 18. = Empty |
| 9. = White/Red = +12V Ignition Switched | 19. = Empty |
| 10. = Not used | 20. = Empty |

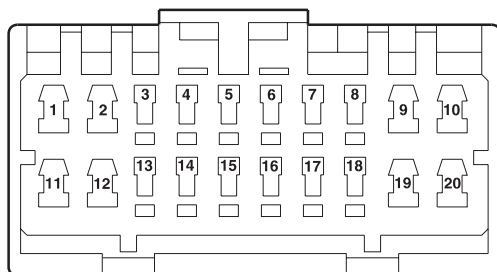

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (#HA1564B) in 1998-02 Honda Accord Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at:

1-800-621-3695x3

©2007 SCOSCHE INDUSTRIES, INC.

SI 8/07 3000003


STEREO INSTALLATION

DIN STEREO

The kit comes DIN ready. Following the instructions supplied with the stereo, secure the stereo to the mounting kit.

CAUTION: Rear support the stereo. This is very important to the structural integrity of the installation.

NOTE:
SNAP SHAFT MOUNTING TABS NOT INCLUDED. IF REQUIRED FOR YOUR STEREO INSTALLATION, CALL 800-621-3695 x3 FOR IMMEDIATE SHIPMENT.

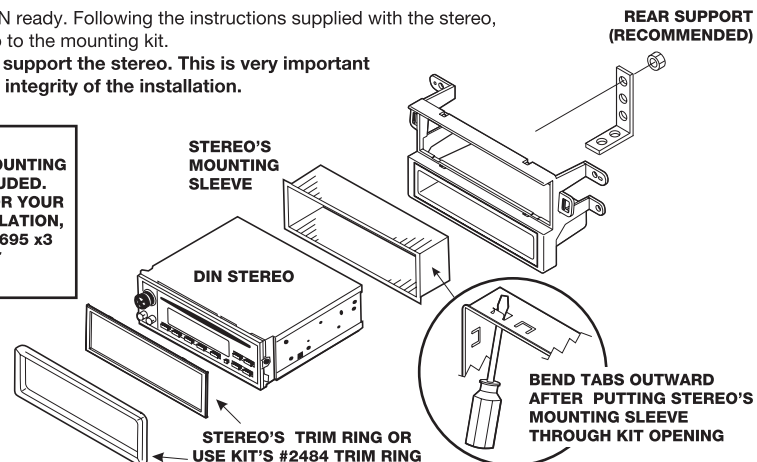


POCKET INSTALLATION

POCKET INSTALLATION

Snap the pocket in place from the front of the kit as shown.

NOTE: Make sure writing on the back of pocket is right-side up.

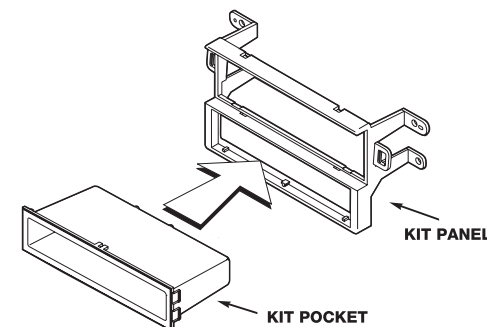

1998-02 HONDA ACCORD

STEREO REMOVAL

1. Extract (2) screws from the bottom of the stereo dash bezel.
2. Carefully pop out the hazard switch/clock assembly and extract (1) screw from behind.
3. Carefully pry up on the stereo trim bezel to release it from the dash, unplug the climate controls and remove the dash bezel.

